

Configuring a Zenitel ISTV-1 Phone


Step 1: Connect the POE and ISTV-1

1. Plug the PC and the ISTV-1 into the Ethernet POE switch.
2. Allow for about 60 seconds for the phone to boot up

Step 2: Configuration Network Settings on the ITSV-1

Network settings

1. Push on the touch screen and touch the icon that looks like 4 boxes

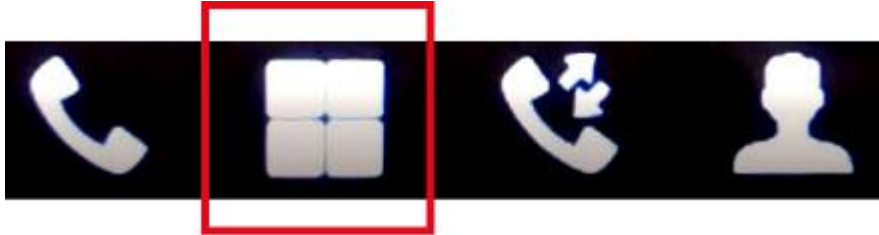

2. Click on **Settings > Wireless & network > Ethernet settings > IPv4**
3. Set Address type to **Static IP**
4. Set IPv4 address to 169.254.1.101
5. Set the Subnet mask to 255.255.0.0
6. Press **OK**

Step 3: Configuration Network Settings on the ITSV-1

1. After the last step, press the back arrow physical button on the right, top row on the phone until you see the main settings screen
2. Scroll down to the **Advanced Settings** selection and tap on it.
3. Tap on **Account1** and turn **Account Activation ON**.
4. Change **Account name** to Truck Scale
5. Set **SIP server** to 169.254.1.100
6. Set **SIP ID** to 301
7. Set **SIP authentication ID** to 301
8. Click the **OK** button at top of screen and programming is complete.