


Configuring a Zenitel ISTV-2 Phone

Step 1: Set a Static IP Address on Your Windows 10 Computer

To access the web interface, your computer must be in the same subnet range as the station. There is a video about this on the config file download site you were just on.

1. Click **Start**, and type **Control** in the search field, then select **Control Panel**.
2. Click on **Network and Internet**.
3. Click on **Network and Sharing Center**.
4. On the left pane, click the **Change adapter settings** link.
5. Right-click on your computer's Ethernet network adapter and select **Properties**.
6. Select the **Internet Protocol Version 4 (TCP/IPv4)** option.
7. Click the **Properties** button.
8. Select the **Use the following IP address** option.
9. Set the **IP address** (e.g., **169.254.1.90**).
10. Set the **Subnet mask**. (e.g., **255.255.0.0**).
11. Click **OK**.
12. Click **Close** again to close the network adapter properties.

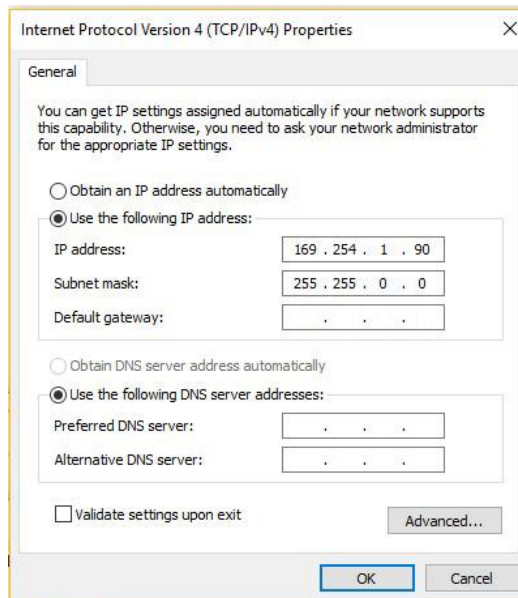

Step 2: Connect the POE and ISTV-2

1. Plug the PC and the ISTV-2 into the Ethernet POE switch.
2. Allow for about 60 seconds for the phone to boot up

Step 3: Configuration Network Settings on the ITSV-2

1. Click the **“Click to add accounts”** button on the home screen
2. Click on **Account 1**
3. Change **Account name** to Truck Scale
4. Set **SIP server** to 169.254.1.100

5. Set **SIP ID** to 301 (or if multiple phones select the next phone IP in the list below)
6. Set **SIP authentication ID** to 301
7. Click the checkmark to save.
8. Click the **Home** button at the bottom of the screen

Step 4: Configuration Network Settings on the ITSV-2

1. Swipe the Home screen to the left and click **Settings**
2. Click the **Ethernet Settings** button
3. Click the **IPv4 settings**
4. Change the **IPv4 address type** to **Static IP**
5. Change **IPv4 Address Type** address to 169.254.1.101, or the next IP address in the list below if installing multiple phones.
6. Click the checkmark to Save.
7. Click the **Home** button at the bottom of the screen

Step 5: Setting the Programmable Keys

1. Swipe the Home screen to the left and select **Programmable Keys**
2. Click the **Ethernet Settings** button
3. Click the **Add** button
4. Type **Scale 1** in the **Name** field
5. Type **300** in the **Number** field
6. Click the checkmark to save
7. Click the **+** button to add additional keys

Step 6: Increasing Volume on the ISTV-2

1. Log in to the phone using **169.254.1.100**
2. Username is **“admin”**
3. Password is **alphaadmin**. The password may have been changed to **alphaadmin1**
4. Click on **System Settings > Preferences > Audio Control**
5. Change **Adjust Volume** slider to **+5**
6. Click the **SAVE** button

Example IP Address Usage for a system with 4 scales and 3 scale house phones:

Directory Number	Name	IP Address
300	Scale 1	169.254.1.100
301	Scale House 1	169.254.1.101
302	Scale 2	169.254.1.102
303	Scale House 2	169.254.1.103
304	Scale 3	169.254.1.104
305	Scale House 3	169.254.1.105
306	Scale 4	169.254.1.106