


Configuring a Zenitel ISTV-3 Phone

Step 1: Set a Static IP Address on Your Windows 10 Computer

To access the web interface, your computer must be in the same subnet range as the station. There is a video about this on the config file download site you were just on.

1. Click **Start**, and type **Control** in the search field, then select **Control Panel**.
2. Click on **Network and Internet**.
3. Click on **Network and Sharing Center**.
4. On the left pane, click the **Change adapter settings** link.
5. Right-click on your computer's Ethernet network adapter and select **Properties**.
6. Select the **Internet Protocol Version 4 (TCP/IPv4)** option.
7. Click the **Properties** button.
8. Select the **Use the following IP address** option.
9. Set the **IP address** (e.g., **169.254.1.90**).
10. Set the **Subnet mask**. (e.g., **255.255.0.0**).
11. Click **OK**.
12. Click **Close** again to close the network adapter properties.

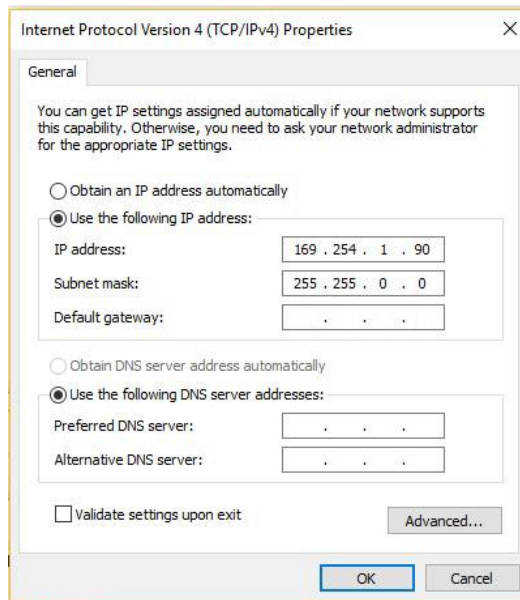

Step 2: Connect the POE and ISTV-3

1. Plug the PC and the ISTV-3 into the Ethernet POE switch.
2. Allow for about 60 seconds for the phone to boot up

Step 3: Configuration Network Settings on the ITSV-3

Network settings

1. On the top of the home page screen, swipe down from the top and a settings gear icon will appear at the top right. Tap on it to open the settings page.

2. Tap on **Ethernet settings** and tap on **IPv4 settings**
3. Change the **IPv4 address type** to **Static IP**
4. Set **IPv4** address to 169.254.1.101, or the next IP address in the list below if installing multiple phones.
5. Set the **Subnet mask** to 255.255.0.0 and the **Default router** to 169.254.1.1
6. Tap to the return arrow at the top left of the screen to return to the main settings.

Step 4: Configuration Network Settings on the ITS-V-1

1. Under **Status**, click **Account status**.
2. Tap on **Account1** and turn **Account Activation ON**.
3. Change **Account name** to Truck Scale
4. Set **SIP server** to 169.254.1.100
5. Set **SIP ID** to 301 (or if multiple phones select the next phone IP in the list below)
6. Set **SIP authentication ID** to 301
7. Click the **OK** button at top of screen and programming is complete.

Example IP Address Usage for a system with 4 scales and 3 scale house phones:

Directory Number	Name	IP Address
300	Scale 1	169.254.1.100
301	Scale House 1	169.254.1.101
302	Scale 2	169.254.1.102
303	Scale House 2	169.254.1.103
304	Scale 3	169.254.1.104
305	Scale House 3	169.254.1.105
306	Scale 4	169.254.1.106