

Setup and Usage Instructions



Read These Instructions First!! (even if you don't read instructions)

Note: This system is already programmed. It is a self-contained system and should not be put on an existing network. Do not change IP addresses in the system or it will no longer function.

There are things that can be fine-tuned, and programming and wiring instructions can be found at www.intercomsonline.com under the ZT1011 product (use the search function to find it).

Call 888-298-9489 for assistance. Do not call Zenitel or Grandstream since they only will only talk to authorized resellers and they don't understand how the system is programmed.

1. Plug the POE Ethernet switch into power. We recommend bench-testing everything with known working cables before the final install.
2. If you have multiple outdoor intercoms, plug in the one marked Edge Controller or Scale 1 first using a standard CAT-5 or 6 cable with RJ-45 connectors. This is the server that drives everything. **Let it boot up for around 60 seconds until the light on the button is solid very dim yellow.**
3. Plug the phone(s) and any other outdoor intercom(s) into the POE switch. **Do NOT use the power supplies that came with the phone(s).** They get their power from the POE Switch.
4. Wait for the phone and other devices to boot up (about 60 seconds).
5. Press the button on the outside intercom and it should make a call to the phone(s).
6. **The phone(s) has speed-dial buttons on the right side. The first button is programmed to call Scale 1.** The second will call Scale 2 if two were purchased. If there are additional outdoor intercoms and phones they should all be programmed on a button as well.