
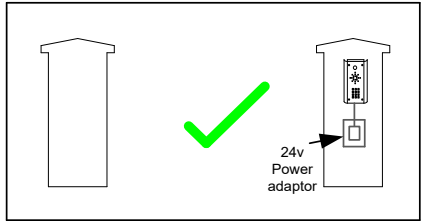


We recommend Bench testing and programming the intercom before installing



QUICK START GUIDE

Power supply Location


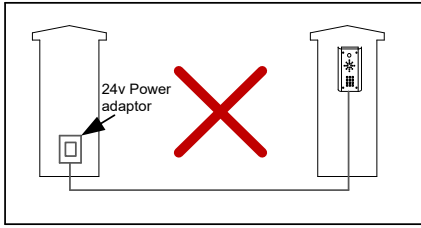


To avoid such problems, it is recommended (and is good practice) to locate the power supply as close to the transmitter as possible.

Installation

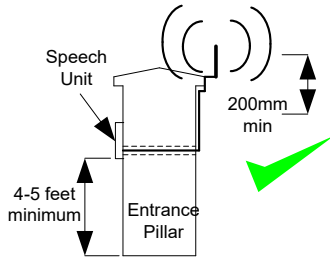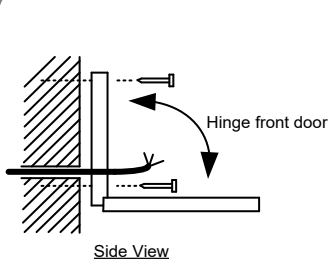


LEDs

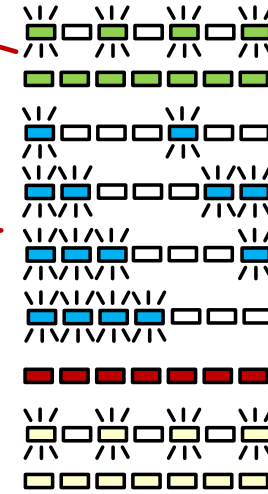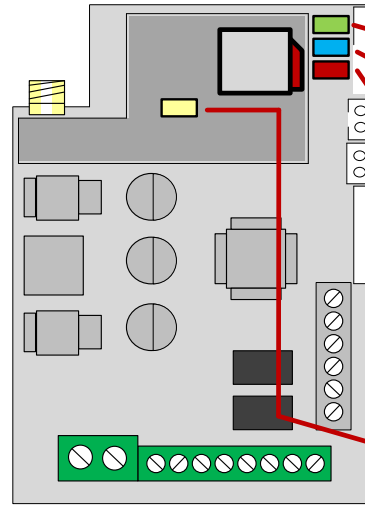

- CPU**
Flashing = standby
Constant ON/OFF = busy
- SIGNAL STRENGTH**
1 flash = poor (1 bar)
2 flashes = low (2 bars)
3 flashes = good (3 bars)
4 flashes = Strong (4 bars)
5 flashes = searching
- POWER**
- MODEM**
Flashing = standby
Constant ON/OFF = searching

Inserting Sim

NANO SIM
45 chamfer IN, pads DOWN

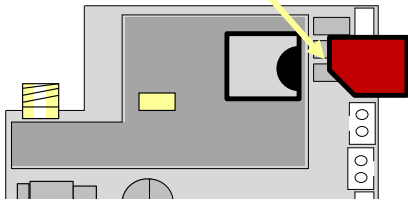


Ensure SIM is activated.
Pre-pay SIM will need credit first.

WARNING

Ensure power is OFF. Do not hot insert or remove while power on.


Power/Antenna

Connect Antenna Provided

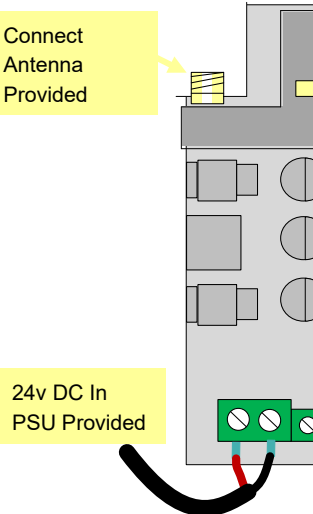


24v DC In
PSU Provided

Relays

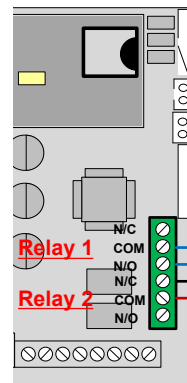

Relay 1
Relay 2

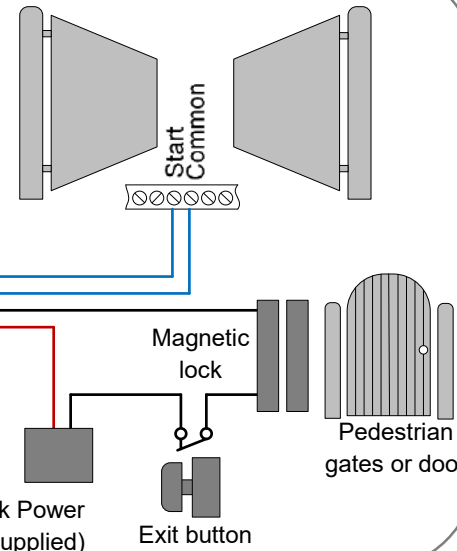

Separate lock Power supply (not supplied)

Download APP



Available on the
App Store

GET IT ON
Google Play


Bench Testing the unit is always recommended before installation.

QUICK START GUIDE


Step 1: Once installed, launch the App, press **ALLOW** on all the permission requests. (Android version)



Step 2: Once registration has been completed, on the main app screen press the **SETTINGS** icon.

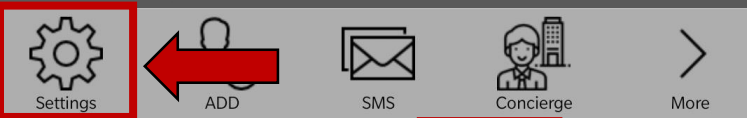

Step 3: Then select the option **NEW SITE**

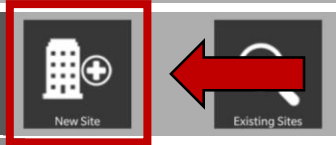

Enter This Information Below

Name
Washington Apts

Intercom Phone Number
0123456789

Step 4: Proceed to enter in all relevant site information.

Save


Be sure to **SAVE** this info.

Step 5: Once the information has been successfully saved, return to the main menu and press the **ADD** icon.



Step 6: Select **MULTI** Button System.

For single and multi apartment programming please select **MULTI** as show in the diagram.

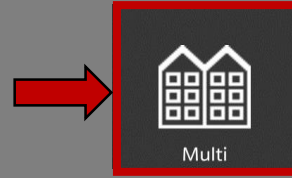

Step 7:

Enter all relevant apartment information e.g. Apartment number, Dialed Number Sequence, Keypad Code or Prox cards.

For single button modules, USE "0" for the apartment number

Once finished remember to **SAVE** this information.


Name	Smith
Apartment\House Number	0
First Dialed Number	123456789
Second Dialed Number	987654321
Third Dialed Number	123456789
keycode must be 6 digits	123456
Card Number	000000000
Card Number	000000000
Card Number	000000000

Save

Step 8A:

To use the Caller ID function select **MORE** tab and proceed to **CALLER ID**

Proceed to select **CALLER ID** option then select appropriate duration for code. (Unlimited/Temporary Access etc.)

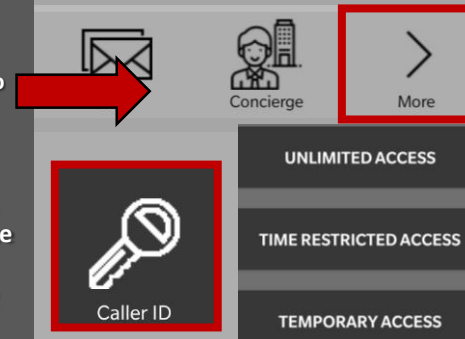

Single Button Layout



Apartment number:
For 1-Button modules use **0** for Apartment\ House Number.

Multibutton Button Layout



Apartment number:
Use the apartment number on your intercom for programming.

