


# Touch Screen Intercom


## QUICK START GUIDE

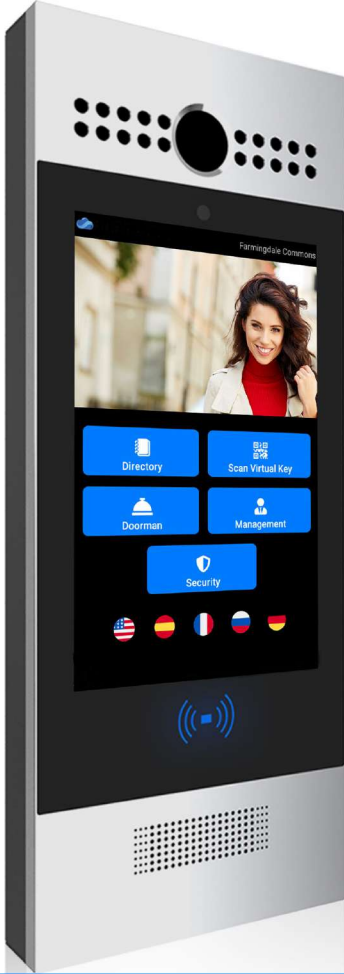


## Included Hardware

- |                                 |                         |                 |
|---------------------------------|-------------------------|-----------------|
| ST4x20 screw x 6                | Screw fixing seat x 6   | M3x6 screw x 3  |
| M3x5 screw x 4                  | Rope x 1                | Rubber Plug x 3 |
| ST1.7X4 x 2                     | Allen Wrench X 1        | AT700AS x 1     |
| Back cover x 1                  | Locking Cable Plate x 1 |                 |
| Silicon rubber sealing ring x 1 |                         |                 |


## Bolt Pattern

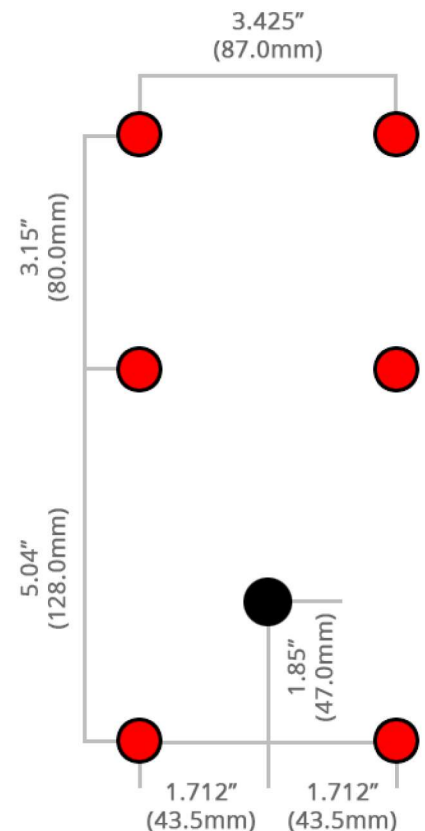

## Installation




Mark the 6 holes of the wall-mounting box on the wall.

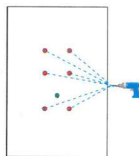


Use hand drill with 3/16" (5mm) diameter bit to make holes in the marked positions

\*Please note the relative position in the left figure and the maximum error should less than 3/16" (5mm)

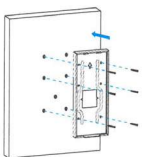


Fix the wall-mounting box with six ST4x20 screws.




Insert the screw fixing seats into the holes you drilled before.


# Installation Continued

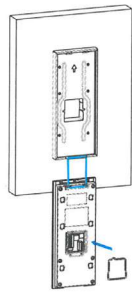


For convenient wiring, hang on the wall-mounting box/flush-mounting bracket with string, then insert the silicon rubber sealing ring into the groove.

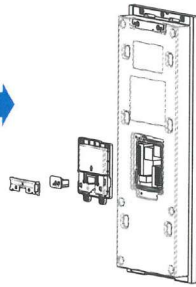


Take down the back cover ,locking plate and rubber plug.

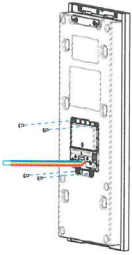


Use four M3x5 screws to fix the back cover.

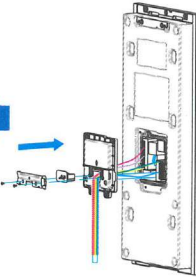

Make cables go through the back cover, connecting to the corresponding interfaces of the main board. Choose a suitable size rubber plug to compress cables , then fasten the locking cable plate with two ST1.7x4 screws.

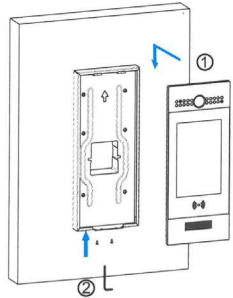

Wall Mounting

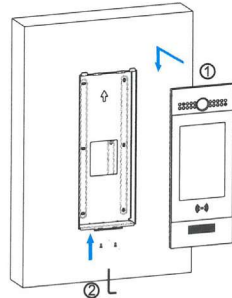


Flush Mounting

1.Place the device into the wall-mounting box / flush-mounting bracket until the edges of which align to the wall. Then pull the device downward and ensure the groove of it hooks to the lock catches of the back box.

2.Use the Allen wrench to tighten the device with two M3x6 screws.

## Wiring Terminals

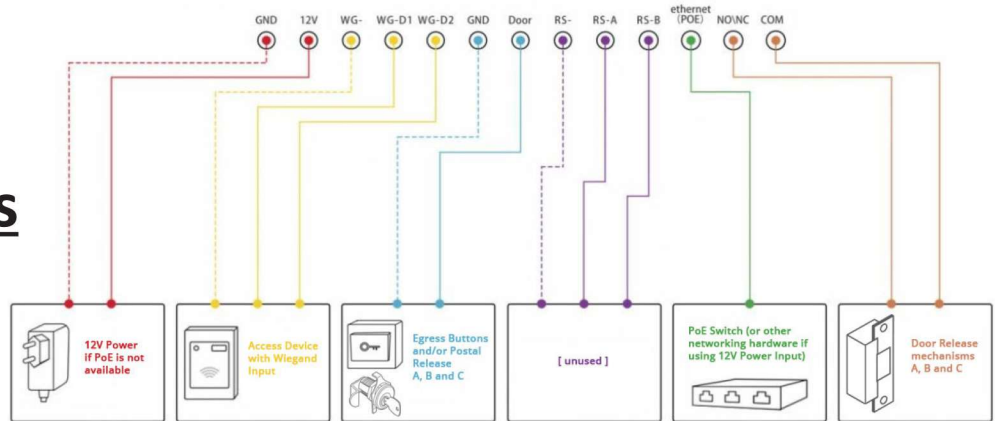

## Door Release Examples

